

ENGLISH

# INSTRUCTION MANUAL

# RETROKIN<sup>®</sup> HD

PREMIUM RETRO GAMING CONSOLE FOR NES




 **HYPERKIN<sup>®</sup>**  
PLAY WELL. LIVE WELL.

[www.hyperkin.com](http://www.hyperkin.com)

Thank you for purchasing the RetroN<sup>®</sup> HD Gaming System. For your safety and the safety of others, please carefully read the instruction manual before using this product.

## Setting Up the RetroN<sup>®</sup> HD

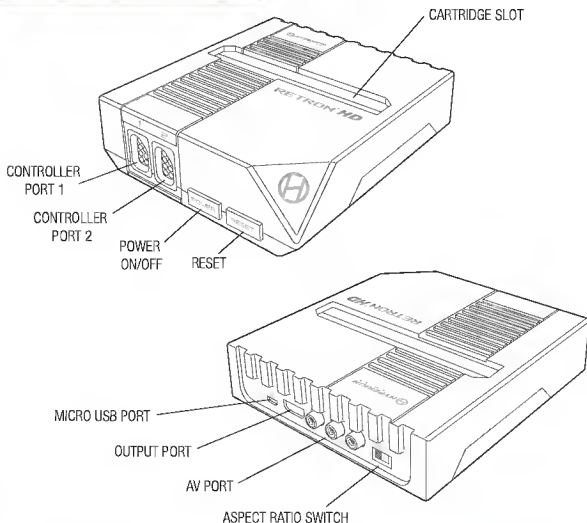

## Setting Up the RetroN<sup>®</sup> HD via HD Cable

1. Insert the HD cable into the OUTPUT PORT on the RetroN<sup>®</sup> HD.
2. Insert the other end of the HD Cable into the HD input on your HDTV.
3. Insert the MICRO USB CABLE into the MICRO USB PORT on the RetroN<sup>®</sup> HD.
4. Insert the other end of the MICRO USB CABLE into a power source. If AC adapter is not included, we strongly advise you use a 5 Volt 1 Amp USB wall AC Adapter.
5. Plug the AC adapter into a power outlet.

## Setting Up the RetroN<sup>®</sup> HD via AV Cable

1. Insert the AV cable into the AV PORT on the RetroN<sup>®</sup> HD.
2. Insert the other end of the AV cable into the AV input on the TV.

## Aspect Ratio and Region Switches

BEFORE powering on your RetroN<sup>®</sup> HD, make sure your aspect (via HD cable only) and region is configured.

- Located in the BACK of the RetroN<sup>®</sup> HD is the ASPECT RATIO SWITCH. Moving the switch to the LEFT position indicates a 16:9 ratio. Moving the switch to the RIGHT position indicates a 4:3 ratio. Aspect ratio can only be toggled when using HD cable.
- Located on the BOTTOM of the RetroN<sup>®</sup> HD is the region switch. Moving the switch to the LEFT position indicates you are using a PAL cartridge. Moving the switch to the RIGHT position indicates you are using an NTSC cartridge.

## Playing NES Cartridges on the RetroN<sup>®</sup> HD

1. Insert the cartridge into the CARTRIDGE SLOT.
2. Turn ON the RetroN<sup>®</sup> HD by pressing the POWER button.
3. While ON, you can reset the RetroN HD by pressing the RESET button.
4. When done playing, press the POWER button to turn OFF the RetroN<sup>®</sup> HD.
5. The Hyperkin Logo located on the right-hand side of the console will light up BLUE when powered on.

*Note: Make sure your aspect ratio and region are configured before powering on the RetroN<sup>®</sup> HD.*

## Using the Premium Classic-Style "Cadet" Controller

With the RetroN<sup>®</sup> HD turned off, insert the Cadet into CONTROLLER PORT 1. For two-player games, insert a second controller into CONTROLLER PORT 2. The RetroN<sup>®</sup> HD is also compatible with original NES controllers.

*Please visit [www.Hyperkin.com/warranty](http://www.Hyperkin.com/warranty) to register your official Hyperkin product for Hyperkin's Warranty.*

©2017 Hyperkin®. Hyperkin® and RetroN® and their logos are trademarks and/or registered trademarks of Hyperkin®, and/or its affiliated companies. All other product names and images, trademarks or registered trademarks are properties of their respective owners. This is a product 100% NOT official and is NOT manufactured, guaranteed, sponsored, endorsed or approved by Nintendo. Made in China. All rights reserved. Product features, appearances and specifications may be subject to change without notice.

